

MEXE02 波形モニタ機能 項目一覧

ARシリーズ 位置決め機能内蔵タイプ DC電源入力

「No.」は信号を選択するときに表示される順番です。

■CH1,2

No.	信号名
1	指令速度[r/min]
2	検出速度[r/min]

■CH3,4

No.	信号名	No.	信号名	No.	信号名
1	+JOG	51	MS1_R	101	SSTART_R
2	+JOG_R	52	MS2	102	START
3	+LS	53	MS2_R	103	START_R
4	+LS_R	54	MS3	104	STOP
5	-JOG	55	MS3_R	105	STOP_R
6	-JOG_R	56	MS4	106	TIM
7	-LS	57	MS4_R	107	TLC
8	-LS_R	58	MS5	108	WNG
9	ALM	59	MS5_R		
10	ALM-RST	60	NET-IN0		
11	AREA1	61	NET-IN1		
12	AREA2	62	NET-IN2		
13	AREA3	63	NET-IN3		
14	C-ON	64	NET-IN4		
15	C-ON_R	65	NET-IN5		
16	END	66	NET-IN6		
17	FREE	67	NET-IN7		
18	FREE_R	68	NET-IN8		
19	FWD	69	NET-IN9		
20	FWD_R	70	NET-IN10		
21	HMI	71	NET-IN11		
22	HOME	72	NET-IN12		
23	HOME_R	73	NET-IN13		
24	HOME-P	74	NET-IN14		
25	HOMES_R	75	NET-IN15		
26	HOMES	76	P-CLR		
27	IN0	77	P-PRESET		
28	IN1	78	R0		
29	IN2	79	R1		
30	IN3	80	R2		
31	IN4	81	R3		
32	IN5	82	R4		
33	IN6	83	R5		
34	IN7	84	R6		
35	M0	85	R7		
36	M0_R	86	R8		
37	M1	87	R9		
38	M1_R	88	R10		
39	M2	89	R11		
40	M2_R	90	R12		
41	M3	91	R13		
42	M3_R	92	R14		
43	M4	93	R15		
44	M4_R	94	READY		
45	M5	95	RVS		
46	M5_R	96	RVS_R		
47	MOVE	97	S-BSY		
48	MS0	98	SLIT_R		
49	MS0_R	99	SLIT		
50	MS1	100	SSTART		