

MEXE02 波形モニタ機能 項目一覧

BLHシリーズ RS-485通信タイプ

「No.」は信号を選択するときに表示される順番です。

■CH1～4

No.	信号名
1	指令速度(モーター軸)[r/min]
2	検出速度(モーター軸)[r/min]
3	インバータ電圧[V]
4	検出トルク[%]
5	選択番号

■CH5～12

No.	信号名	No.	信号名
1	ALM-A	51	R-IN10
2	ALM-B	52	R-IN11
3	ALM-RST	53	R-IN12
4	D-IN0	54	R-IN13
5	D-IN1	55	R-IN14
6	D-IN2	56	R-IN15
7	D-IN3	57	R-OUT0
8	D-IN4	58	R-OUT1
9	DIR	59	R-OUT2
10	D-OUT0	60	R-OUT3
11	D-OUT1	61	R-OUT4
12	EXT-ERROR	62	R-OUT5
13	FWD(START/STOP)	63	R-OUT6
14	HMI	64	R-OUT7
15	INFO	65	R-OUT8
16	INFO-CFG	66	R-OUT9
17	INFO-CLR	67	R-OUT10
18	INFO-DRV	68	R-OUT11
19	INFO-DRVTMP	69	R-OUT12
20	INFO-DSLMTD	70	R-OUT13
21	INFO-IOTEST	71	R-OUT14
22	INFO-LOAD	72	R-OUT15
23	INFO-NET-E	73	R0
24	INFO-ODO	74	R1
25	INFO-OVOLT	75	R2
26	INFO-PCOUNT	76	R3
27	INFO-PTIME	77	REV(RUN/BRAKE)
28	INFO-RBT	78	SPEED-OUT
29	INFO-REV	79	STOP-MODE(FWD/REV)
30	INFO-SET-E	80	SYS-BSY
31	INFO-SPD	81	TL
32	INFO-SPD-DE	82	TLC
33	INFO-TRIP	83	VA
34	INFO-TRQ-DE		
35	INFO-UVOLT		
36	M0		
37	M1		
38	M2		
39	MOVE		
40	MPS		
41	R-IN0		
42	R-IN1		
43	R-IN2		
44	R-IN3		
45	R-IN4		
46	R-IN5		
47	R-IN6		
48	R-IN7		
49	R-IN8		
50	R-IN9		